

Ink cartridge compatibility

- Cartouches d'Encre - Tableau de compatibilité
- Lista zgodno. ci wk.adow atramentowych
- Kompatibilitätsliste für Tintenpatronen
- Compatibilidad de cartuchos de tinta
- Lista de Compatibilidades de tinteiros
- Compatibilitätsverzeichnis inktpatronen



Printer Model - Epson Stylus Photo

Epson Stylus Photo 950																			
	T0331	T0332	T0333	T0334	T0335	T0336													
Epson Stylus Photo R200/R300/ RX500/RX600/R220/R320/R340/RX620																			
	T0481	T0482	T0483	T0484	T0485	T0486													
Epson Stylus Photo R800/R1800																			
		T0542	T0543	T0544			T0548		T0547	T0549	T0541	T0540							
Epson Stylus Photo 2100																			
	T0341	T0342	T0343	T0344	T0345	T0346	T0347	T0348											
Epson Stylus Photo R2400																			
		T0592	T0593	T0594	T0595	T0596	T0597	T0598	T0599				T0591						
Epson Stylus Photo RX420/425/RX240/245																			
	T0551	T0552	T0553	T0554															
Epson Stylus Photo RX700																			
	T5591	T5592	T5593	T5594	T5595	T5596													

Printer Model - Epson Stylus C/Stylus CX Series

Epson Stylus C64 Series/C66 Series/ C84 Series/C86 Series/ - CX3600/CX3650/CX6400/CX6600															
	T0441	T0452	T0453	T0454								T0431*	T0442*	T0443*	T0444*
Epson Stylus C70/C70+/C80															
	T0321	T0322	T0323	T0324											
Epson Stylus C82/CX5200/CX5400															
	T0321	T0422	T0423	T0424											
Epson Stylus C63/C65PE/CX3500															
	T0461	T0472	T0473	T0474											
Epson Stylus C67/C87/C87PE CX4700/CX4100/CX3700															
	T06314	T06324	T06334	T06344											
Epson Stylus D68/D88/D88PE/DX4800/ DX4850/DX4200/DX4250/DX3800/DX3850															
	T0611	T061	T0613	T0614											

*For C84/C86 series, CX6400, CX6600 only



Black



Colour

Printer Model - Epson Stylus Photo

Epson Stylus Photo 700/710/EX/EX2		
	S020093	S020110
Epson Stylus Photo 720/750		
	S020187	S020193
Epson Stylus Photo 790/870/875DC/890/895/915		
	T007	T008
Epson Stylus Photo 810/830 Series/925/935		
	T026	T027
Epson Stylus Photo 900		
	T007	T009
Epson Stylus Photo 1200		
	S020187	T001
Epson Stylus Photo 1270/1290		
	T007	T00909
Epson Stylus Photo 2000P		
	T015	T016

Printer Model - Epson Stylus C/Stylus CX Series

Epson Stylus C20UX/C40UX/C40SX/CX40+		
	T013	T014
Epson Stylus C42/C44/C46		
	T036	T037
Epson Stylus C43/C45		
	T038	T039
Epson Stylus C48		
	T066	T067
Epson Stylus C60		
	T028	T029
Epson Stylus C62/CX3200		
	T040	T041
Epson Stylus Color 1160		
	S020189	S020191



Black



Colour

Epson Stylus C/Stylus CX Series continued

Epson Stylus Color 400/600		
	S020093	S020089
Epson Stylus Color 440/460/640/ 660/670		
	S020187	S020191
Epson Stylus Color 480/480SXU/580		
	T013	T014
Epson Stylus Color 500		
	S020093	S020097
Epson Stylus Color 680/685		
	T017	T018
Epson Stylus Color 740/760/860 2000/2500		
	S020189	S020191
Epson Stylus Color 800/850		
	S020108	S020089
Epson Stylus Color 880		
	T019	T020
Epson Stylus Color 900/980		
	T003	T005
Epson Stylus Color 1520		
	S020108	S020089

Printer Model - Epson PictureMate

Epson PictureMate
Epson PictureMate 500



T5570

Epson PictureMate 100



T5730